

How To:

Assemble K5 Auto-Fill

K5 Auto-Fill Kit



Includes:

- 1 - 1 1/4" x 1 SS Bushings
- 1 - 1-1/4" x 3/4" SS Bushings
- 1 - 1 1/4" SS Coupling
- 1 - 2" x 1 1/2" Flex-Coupling
- 1 - 3/4" x 6" Sch. 40 Cut Nipple
- 1 - 3/4" x 7-1/2" Sch. 40 Cut Nipple
- 1 - 3/4" x 1/2" Male Adapter
- 2 - 1/2" TxT 90
- 1 - 1/2" x 3" Sch. 80 Nipple
- 1 - 1/2" x 6" Sch. 80 Nipple
- 1 - 1/2" x 8" Sch. 80 Nipple
- 1 - 1/2" x 12" Sch. 80 Nipple
- 1 - Auto-Fill

- Includes multiple extensions for high or low level positioning
- Connects to a 1" or 1-1/4" PVC pipe.

Note: Install Backflow Prevention as required by local code. Working Pressure: 0-100 PSI. Flow Range: 0-1.5 GPM.


Step 1:

Remove 1/2" from the Auto-Fill port.



Step 2:

Assemble fittings as shown and connect to the Auto-Fill port.

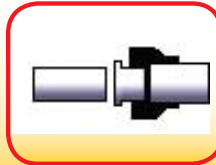


Step 3:

Assemble the rest of the Auto-Fill assembly and connect to the end of the pipe inside the tank.

High Level Positioning
When using a Door Skimmer in a pond installation



Low Level Positioning
When used with a Fixed Skimmer in a Vanishing Water installation or an installation requiring underground containment.

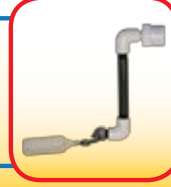

FILTRIFIC®

Professional Water Feature Products

www.filtrific.com

Copyright © Filtrific Company 2006 All Rights Reserved. LN:1002